

## Point-of-Sale Hardware Parts List

### Hardware

1. Pole Display
2. Receipt Printer, Parallel
3. Cash Drawer
4. Cash Drawer Shoe
5. Keyboard
6. CCD LR Bar Code Scanner
7. Scanner Autosense Stand

### Cables

1. Pole Display Power Cord
2. Pole Display DB9 Communications Cable
3. Receipt Printer Parallel Cable
4. Receipt Printer Power Supply w/ Power Cord
5. Cash Drawer Communications Cable  
(Cable is hardwired to Cash Drawer)
6. Keyboard Communications Cable  
(Cable is hardwired to Keyboard)
7. CCD LR Scanner Cable (PS2 Y Cable)


### Documentation

1. Quick Start
2. Pole Display User's Manual
3. Receipt Printer User's Manual
4. CCD LR User's Manual
5. Keyboard Utility CD


### Software

1. Only included in software bundles

**Wasp Technologies**  
1400 10th Street  
Plano, Texas 75074  
214-547-4100  
Fax: 214-547-4101  
www.waspbarcode.com

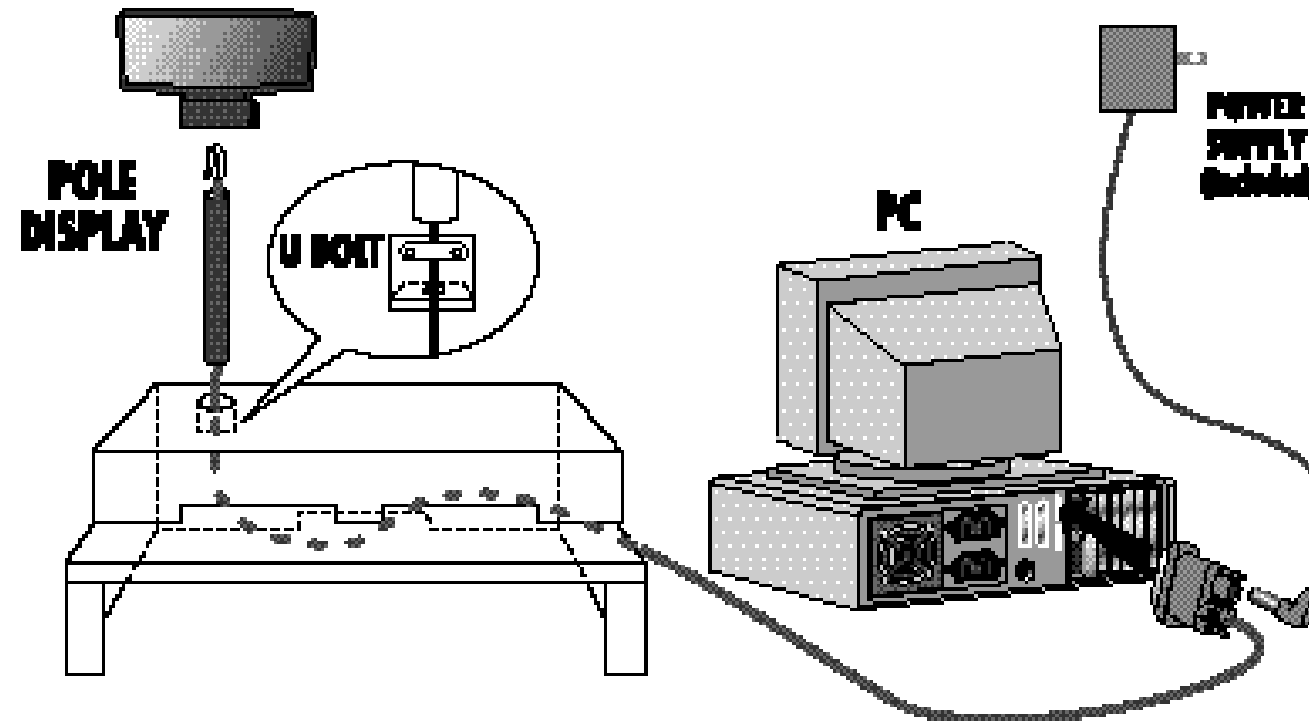


- 1** Thread **Pole Display Cable** through **Cash Drawer Shoe**, through **Pole Display Pole**, and connect to the **Display Head**. Connect **Pole to Display Head**, and tighten **U-Bolt** within **Shoe** around **Pole Display Pole** to secure. Thread other end of **Pole Display Cable** through **back slot** of **Cash Drawer Shoe**, and connect to your PC. **Power Supply** connects as shown, and plugs in standard wall outlet.

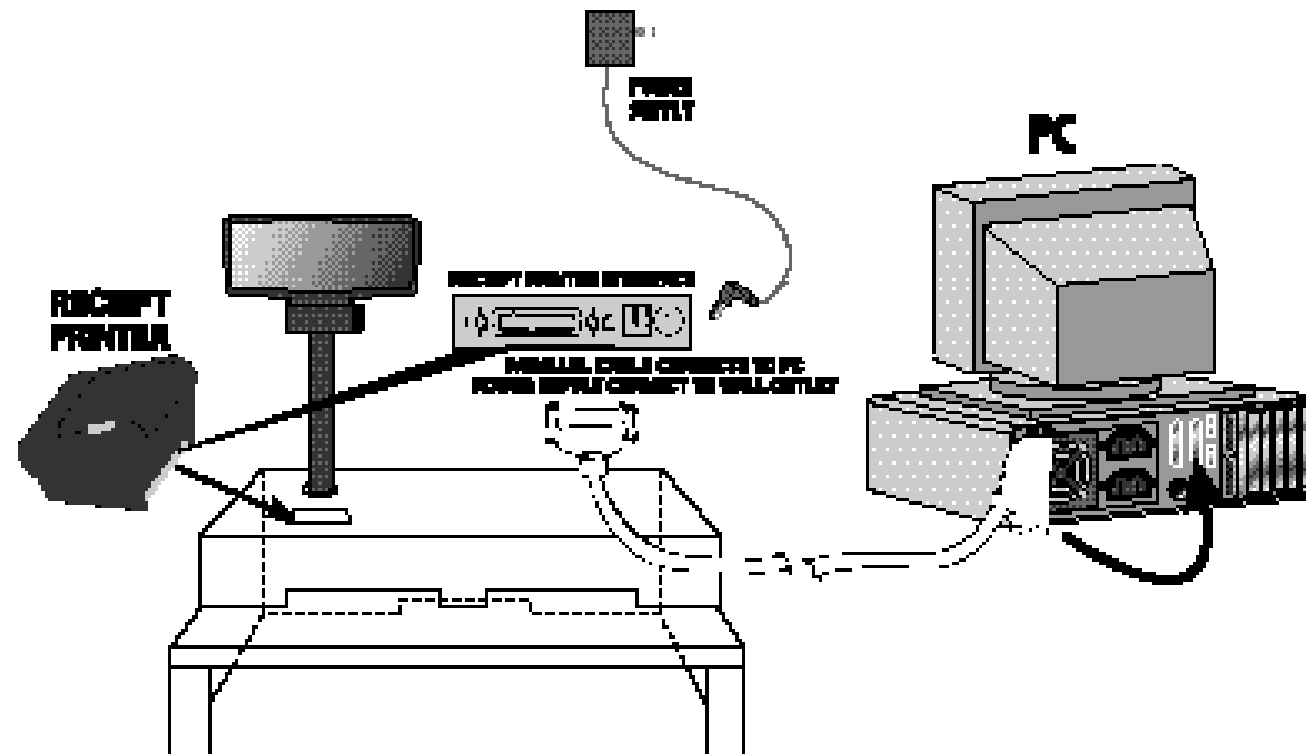


- 2** Thread both **Parallel Cable** and **Power Supply Cable** up through **rectangular slot** on top of **Cash Drawer Shoe** (in front of Pole Display) and connect to **back** of **Receipt Printer**. Thread other ends of **Parallel Cable** and **Power Supply** out through **back slot** of **Cash Drawer Shoe**. Connect **Parallel Cable** to **Parallel Port** on back of your PC, and plug **Power Supply** into standard wall outlet.


# Point-of-Sale Hardware Quickstart Setup Guide

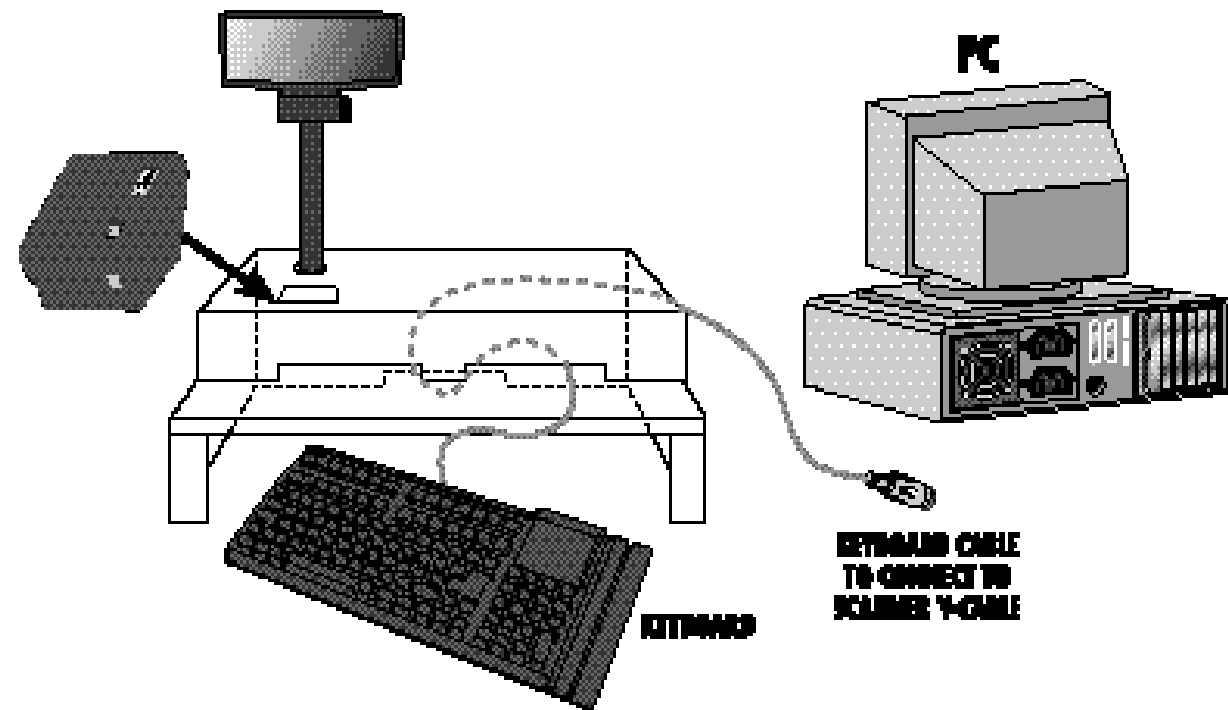

**3** Thread **Keyboard Cable** through *right front slot* of **Cash Drawer Shoe** and out through *back slot* of **Cash Drawer Shoe**. Place **Keyboard** on lower "shelf."

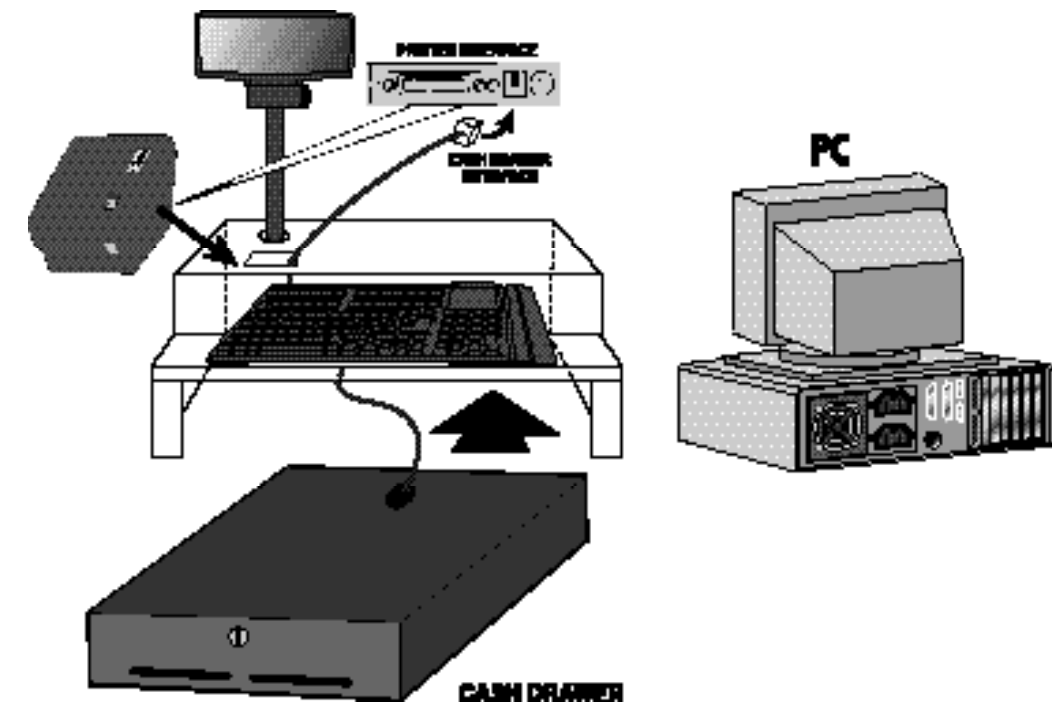

**4** Thread **Cash Drawer Cable** up through *rectangular slot on top* of **Cash Drawer Shoe** and connect to the *back* of the **Receipt Printer**, as shown in illustration. Slide **Cash Drawer** under **Cash Drawer Shoe**, and align front of drawer with front of **Cash Drawer Shoe**.

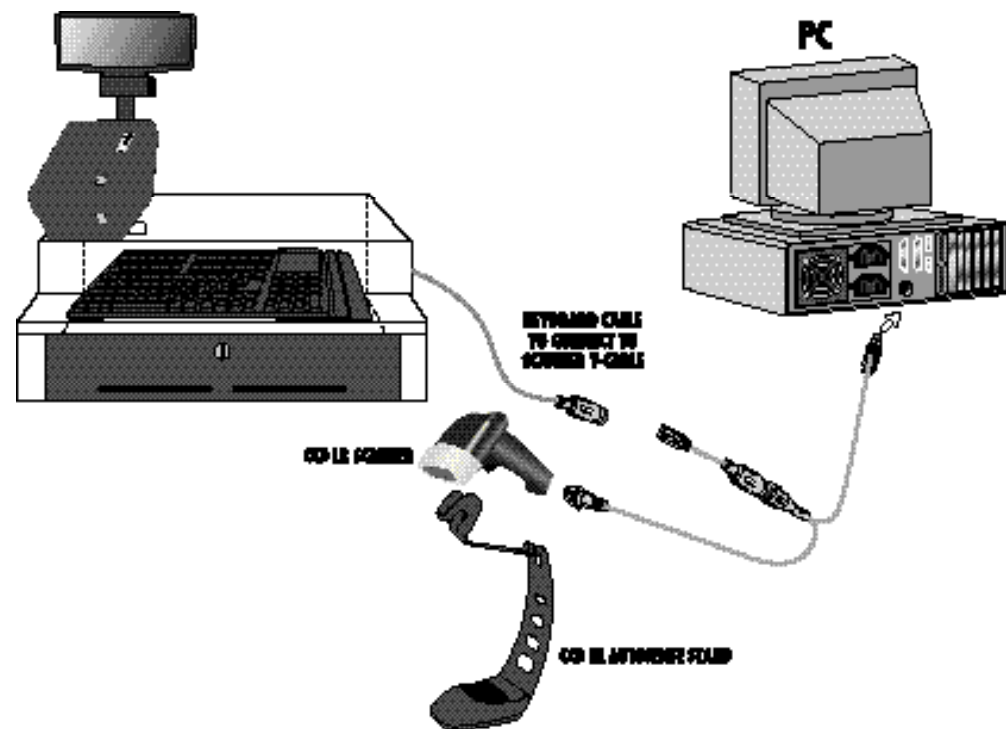

**5** Connect **Scanner Y-Cable** in appropriate slot in the *handle* of **CCD LR Scanner**, and place Scanner in the **CCD LR Autosense Stand**. Connect other end of the Scanner Y-Cable to the Keyboard Cable (see diagram 3), and then connect female end of Y-Cable to the keyboard port of your PC.

**6** Please reference *pages 6-7* of your **Receipt Printer Manual** for proper loading of receipt paper into the Receipt Printer, and also please refer to *page 6* in the **CCD LR Scanner Manual** to program the Autosense Mode for hands-free scanning using the Autosense stand.

## Wasp Technologies

1400 10th Street  
Plano, Texas 75074  
214-547-4100  
Fax: 214-547-4101  
[www.waspbarcode.com](http://www.waspbarcode.com)