Installing the Receipt Printer.

Click on "Start" and go to "Printers a Marosoft office Outlook Microsoft Office Outlook Micro

Click on the "Add Printer" button



Click on "Next"



Click on "Start" and go to "Printers and Faxes"

Select "Local printer attached to this computer" and uncheck the Automatically detect and install my plug and play computer" then click "Next"



Select the relevant port you are using (USB or LPT1) and click "Next"

Add Printer Wizard
Select a Printer Port Computers communicate with printers through ports.
Select the port you want your printer to use. If the port is not listed, you can create a new port.
Note: Most computers use the LPT1: port to communicate with a local printer. The connector for this port should look something like this:
Create a new port: Type of port: CutePDF Writer Monitor
<u>⟨B</u> ack <u>N</u> ext> Cancel

Select the Manufacturer "Generic" and the Printer as "Generic / Text Only" printer. Click "Next"

Add Printer Wizard	
Install Printer Software The manufacturer and model	determine which printer software to use.
Select the manufacturer an disk, click Have Disk. If you compatible printer software.	d model of your printer. If your printer came with an installation ur printer is not listed, consult your printer documentation for
Manufacturer 🔼	Printers
Epson	Generic / Text Only
Fujitsu	Generic IBM Graphics Spin
GCC Generic	MS Publisher Color Printer
💱 This driver is digitally signed.	Windows Update Have Disk
Tell me why driver signing is imp	oortant
	< <u>B</u> ack <u>N</u> ext > Cancel

Enter the name as "Receipt Printer" and click "Next"

Add Printer Wizard
Name Your Printer You must assign a name to this printer.
Type a name for this printer. Because some programs do not support printer and server name combinations of more than 31 characters, it is best to keep the name as short as possible.
Printer name:
Receipt Printer
Do you want to use this printer as the default printer? ○Yes ⊙No
< <u>B</u> ack <u>N</u> ext > Cancel

Select "Do not share this printer" and click "Next"

Add Printer Wizard
Printer Sharing You can share this printer with other network users.
If you want to share this printer, you must provide a share name. You can use the suggested name or type a new one. The share name will be visible to other network users.
Do not share this printer
◯ <u>S</u> hare name:
< <u>Back</u> <u>N</u> ext > Cancel

Select "No" to printing a test page and click "Next"

Add Printer Wizard	
Print Test Page To confirm that the printer is installed prop	erly, you can print a test page.
Do you want to print a test page?	
OYes	
⊙ No	
	< <u>B</u> ack <u>N</u> ext > Cancel

	oompr	
Add Printer Wizard		
	Comple Wizard	ting the Add Printer
	Name: Share name: Port: Model:	Receipt Printer <not shared=""> USB001 Generic / Text Only</not>
	Default: Test page:	No No
	To close this	wizard, click Finish.
		< <u>B</u> ack Finish Cancel

Open Quickstore and go to "Setup" and "This Computer"

🥖 Changing Com	iputer Settings (Station Number	r 1)	
5. Credit Cards 1. General Ease of Use Sett	<u>6</u> . Miscellaneous <u>2</u> . Cash Drawer ings effects in the program	<u>7</u> . Shipping <u>3</u> . Pole Display n	8. Ordering 4. Scanner	<u>OK</u> Cancel
 ✓ Pressing EN ✓ Always maged ✓ Use the sim This compute 	TER moves to the ne <u>x</u> imize screens on op ple point-of-sale s <u>c</u> re ter has a <u>t</u> ouch scree	xt field on forms en en n (requires 1024 X	768 resolution)	
General Settings ☐ Require a <u>u</u> ♥ Require nev ♥ <u>A</u> llow inven ♥ Sho <u>w</u> chan ☐ Reduce wir	ser to re-login before w invoices to be printu tory costs on the invo ge due in a message udow flicker by remov	starting or modifyin ed entory list to be disp box after tendering ving visual theme su	g a sales entry item Ilayed payments pport (requires re-start)

Select Tab 2 for "Cash Drawer", Tick "This computer controls a cash drawer" and select the relevant printer. You can now test the cash drawer.

<

🖊 Changing Con	nputer Settings	Station Number 1)	
5. Credit Cards	6. Miscellaneous	Z. Shipping	8. Ordering	
<u>1</u> . General	2. Cash Drawer	3. Pole Display	4. Scanner	j <u>o</u> k
This computer	controls a cash drav	ver		
The seek down	in a second de la calentaria			Cancel
The cash drawer	is connected to: Rece	eipt Printer 💌		
Test Drawer	Model: Vas	p WRP8055 🛛 💌		
	Printer: Rece	sipt Printer	×	
Cash Drawer Sł	hift Tracking			
 Not used 				
O Track this sta	ation's cash dravver a	nd allow multiple users	to tender payments	
🔘 Track this sta	ation's cash dravver a	nd allow a single user	to tender payments	

Click "Finish" to complete the installation.



Select the relevant printer here and click "OK"

Dui-t-u		
Pri <u>n</u> ter:	Receipt Printer 🛛 💙	
<u>T</u> ype:	Receipt	Cancel
Mo <u>d</u> el:	Wasp WRP8055	
Note: To in assig	stall additional printers or to change port gnments, use the Windows Control Panel.	
Note: To in assig Print on:	estall additional printers or to change port griments, use the Windows Control Panel. Receipt Paper (Continuous)	Previ
Note: To in assiç Print on:	estall additional printers or to change port griments, use the Windows Control Panel.	Previ

Installation Complete.