

# Enable or Disable Invisible Characters

HT = horizontal tab (\$I)

CR = carriage return = Enter (\$M)

ESC = Escape (%A)



Enable  
Invisible  
Characters



Disable  
Invisible  
Characters

This configuration sheet applies to the following scanner models:

WWS100i

WWS550i

WWR2900 (with Firmware FM3-b-1.03-IN or later. Firmware starting with AMC is older and may not work.)

WCS3950

WLR8950