

CCD Setup & Configuration

—Set Default Configuration

The 'Set Default' configuration restores the factory default settings.

Tip: Use this option to restore the factory default settings if you are unsure of your CCD's configuration. The 'Set Default' configuration is very useful when you need to reprogram your Wasp CCD reader after the defaults have been changed. By setting the default configuration, the user knows precisely the configuration for each programmed setting.



Begin



Default



End