

This is applicable to the following scanners:  
WWS100i, WWS550i, WWR2905 (FM3 firmware),  
WCS3950, WLR8950, and possibly others.

For 30-digit EAN 128 barcodes (e.g. USPS tracking number barcode), don't send characters 1-8, send characters 9-30. Other barcodes, including EAN 128 barcodes of different length, and other symbologies, are not affected.

Scan all the barcodes in this document, proceeding down each column in turn. If two numbers appear on one line, scan those left-to-right, then continue down the column.

Format 1 On



Format 1 Clear



Edit Format 1



Code Length (Min)



3 0



Code Length (Min)



Code Length (Max)



3 0



Code Length (Max)



Code Type



EAN 128



Code Type



Not Matching



Continue to the next page.

Edit Block 1



Output Sequences



Block Length



Block 2



0 8



Output Sequences



Block Length



This is the end of the configuration procedure.

Edit Block 2



Block Length



2 2



If you make a mistake, forget a step, etc. the scanner will beep three times as a reminder that a setting is not complete. Scan Reset to start again.

Block Length



Reset

