


Interface Selection for WCS3950


The Interface Selection barcodes allow you to switch interfaces based on your connection type.

The scanner is designed to switch easily between interface options. To switch from one interface to another, the appropriate cable must be installed. After changing to a new cable, be sure to reset the interface setting.

Also, some PCs will require you to reboot after scanning the PS2 barcode before the scanner and keyboard are recognized.

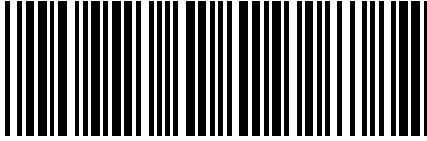

USB KB

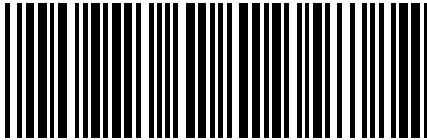

PS2