 
 


Wasp WWS800/850 Configuration Sheet For Sending Data by Character (BT-HID)



Enter Setup



Transmit : By Character



Update