

WWS100i Factory Reset

For scanners with firmware version 1.31

This document should only need to be scanned if the scanner pairs but sends no data.

Please contact tech support if there are any questions prior to scanning.

Scan each barcode and wait for the beep before scanning the next barcode. After scanning all barcodes on the sheet, push a pin or paperclip into the reset pinhole on the back of the scanner, then pair with the standard directions in the Quick Start Guide.

Step 1. Factory Default



.A001\$

Step 2. Custom Settings



.A017\$



....8B008C06



8D02E90CEA57



EB61EC73ED70



EE20EF42F061



F172F263F36F



F464F565.

Step 3. Set BT-HID



.E043\$

Step 4. Push the reset pinhole on the bottom of the scanner.